

14) EXPLODED VIEWS AND PARTS LISTS

Position	Description	TRACTEL CODE						
		125 1 Fall	250 1 Fall	500 2 Fall	500 1 Fall	1000 2 Fall	1000 1 Fall	2000 2 Fall
13	Back Frame Seal	127225	127265	127265	127305	127305	127345	127345
14	Back Frame Gearbox	15882	15892	15892	15902	15902	15912	15912
14.1	Copper Bush							
15	Transformer	24512				24332		
15.1	Screw M5 x 12							
15.2	Spring-Type Washer Ø 5 mm							
15.3	Washer Ø 5 mm							
16	Back Frame Cover Gasket	127235	127275	127275	127315	127315	127355	127355
17	Back Frame Cover	16122	16132	16132	16142	16142	16152	16152
17.1	Counter Weight							
17.2	Screw							
17.3	Screw							
17.4	Spring-Type Washer Ø 6 mm							
17.5	Washer Ø 6 mm							
18	Brake Kit Complete	32202	32212	32212	32222	32222	32232	32232
19	Name Plate	24422	24432	24522	24442	24532	24452	24462
19.1	Name Plate Screw M3 x 6							
20	Rubber Plug	32432						
21	Terminal Box Kit	16052						
22	Drive Shaft Pinion	15762	15772	15772	15782	15782	15792	15792
22.1	Bearing							
22.2	Circlips							
23	Kit Overload Friction Clutch	32162	32172	32172	32182	32182	32192	32192
24	Primary Gear	15722	15732	15732	15742	15742	15752	15752
25	Secondary Shaft Pinion	15842	15852	15852	15862	15862	15872	15872
25.1	Bearing							
25.2	Circlips for Shaft							
26	Loose End Chain Block	15642	15652	15652	15662	15662	15672	15672
26.1	Round Wire Ring							
26.2	End Chain Pin							
27	Load Chain	8301	17241	17241	15861	15861	15501	15501
28	Limit Switch End Block Kit	32302	32312	32342	32322	32352	32332	32362
29	Limit Switch Assembly	32262	32272	32272	32282	32282	32292	32292
30	Cable Gland	73206	73206	73206	73206	73206	73206	73206
31	Control Cable Support	15202	15202	15202	15202	15202	15202	15202
32	Pendant Control Box	58218-1 Speed				58228-2 Speed		
33	Control Cable	9871	9871	9871	9871	9871	9871	9871
34	Control Plug M/F	15242	15242	15242	15242	15242	15242	15242
35	Voltage Conversion Board	24312 - 1 Speed				24322 - 2 Speed		
36	Support Bracket	32412						
36.1	Screw M3 x 6							
36.2	Washer Ø 3 mm							